



BAR TO FRAME EXTENSION




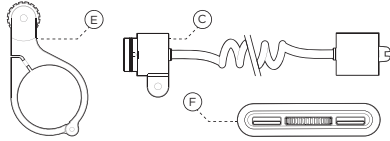


C. Extension Cable
E. Tri-Prong Handlebar Mount
F. Frame Mount

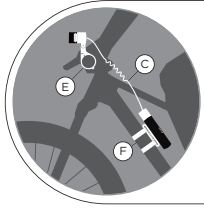



quick start guide

pwr mountain kit

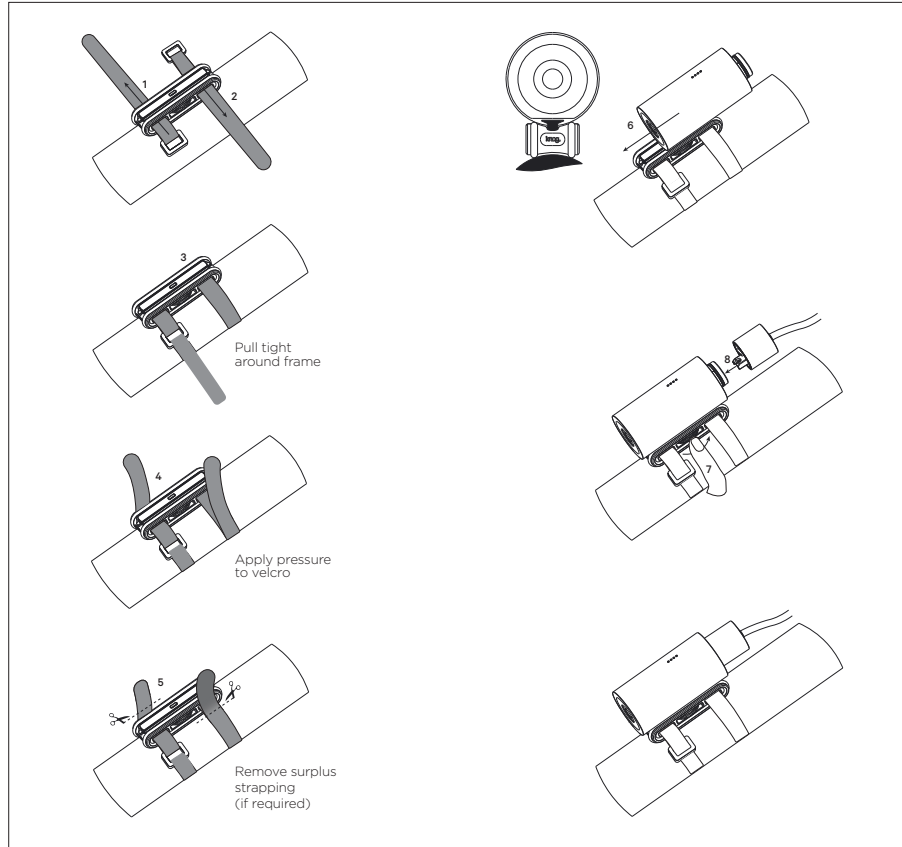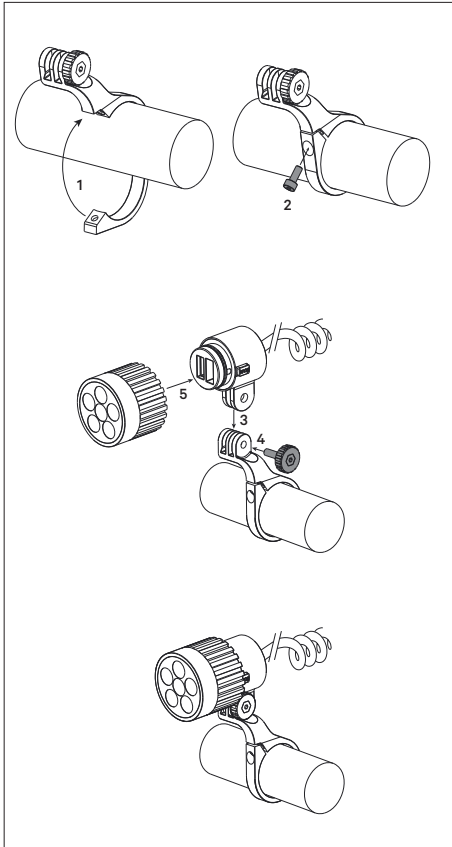


knog.




HELMET EXTENSION

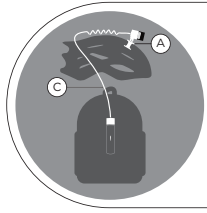

A. Helmet Mount
C. Extension Cable

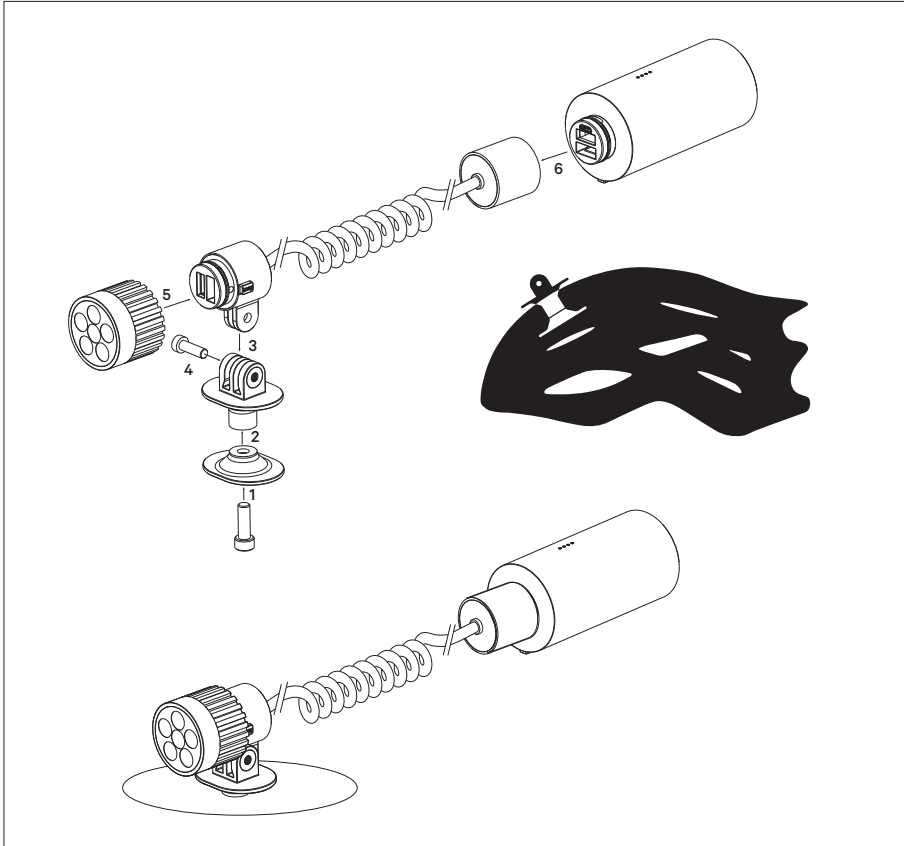

BRAKE BOSS TO FRAME EXTENSION

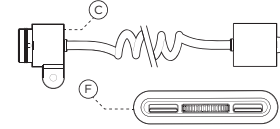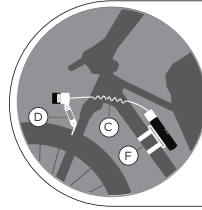

C. Extension Cable
D. Brake Boss Mount
F. Frame Mount

